

Accessories and other components


PROTECTORS

Upright protector

They are installed on each of the external uprights of the installation.

Their function is to protect the installation from any damages caused by impacts from the forklift.

There are several models to suit each upright.

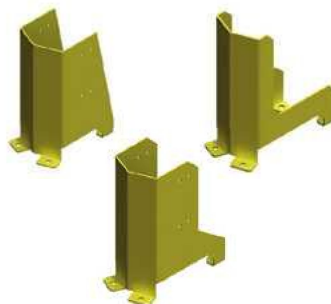

Corner upright protector

Corner protectors are an alternative option when it is not possible to install upright protectors.

They protect the external uprights, are fixed to the floor and are made of sheet metal.

Their design can either be smooth or grooved, according to needs.



Upright reinforcement protector

Upright reinforcement protectors are used in installations in which the upright must be protected at a height that is higher than that reached by the upright protector.

They can be either sheet metal or plastic, and both are fixed to the upright itself.



Side frame protector

The side or frame protectors protect the storage system in its lower side area.

These "C" shaped protections are placed on the outer frames, where impacts are more common. They are normally coupled to the upright protectors for greater effectiveness.

There are also side wood protectors, which serve the same purpose.

